

ECONO ROLL 33.5"

RETRACTABLE BANNER STANDS

PRODUCT CODE: ER33.5

SET UP INSTRUCTIONS


Step 1

Twist the feet.




Step 2

Assemble telescopic pole.

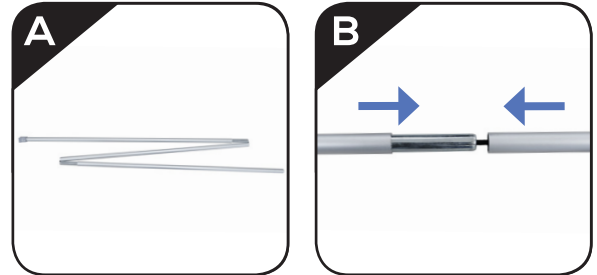

Step 3

Insert telescopic pole into hole.

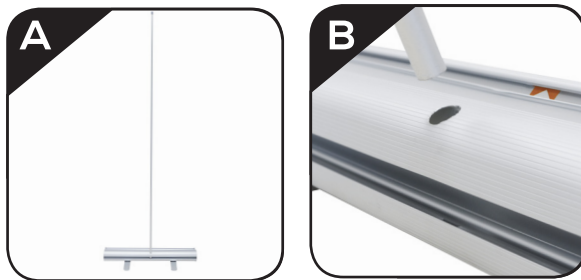


Step 4

Pull banner out of the base.



Step 5

Attach telescopic pole to the clamp bar.

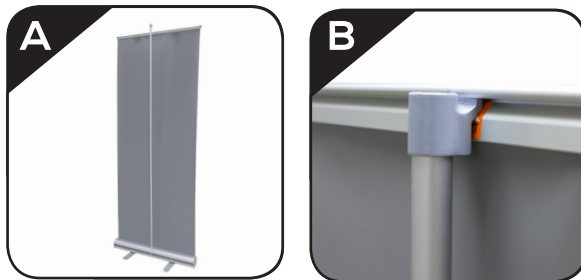

Step 6

Complete stand.

